
Non-immersible, non-polarized plug, not grounded

IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

DANGER - TO AVOID POSSIBLE ELECTRIC SHOCK, special care should be taken since water is employed in the use of aquarium equipment. For each of the following situations, do not attempt repairs by yourself: return the appliance to an authorized service facility for service or discard the appliance:

- 1. If the appliance falls into the water, DON'T reach for it! First unplug it and then retrieve it. If electrical components of the appliance get wet, unplug the appliance immediately.
- 2. Carefully examine the appliance after installation. It should not be plugged in if there is water on parts not intended to get wet.
- 3. Do not operate any appliance if it has a damaged cord or plug, or if it is malfunctioning or has been dropped or damaged in any manner.
- 4. To avoid the possibility of the appliance plug or receptacle getting wet, position aguarium stand and tank to one side of a wall-mounted receptacle to prevent water from dripping onto the receptacle or plug. A "drip loop," shown in the figure at right, should be arranged by the user for each cord connecting an aquarium appliance to a receptacle. The "drip loop" is that part of the cord below the level of the receptacle, or the connector if an extension cord is used, to prevent water traveling along the cord and coming in contact with the receptacle.

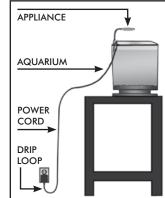

If the plug or receptacle does get wet, DON'T unplug the cord.

Disconnect the fuse or circuit breaker that supplies power to the appliance. Then, unplug and examine for presence of water in the receptacle.

- 5. Close supervision is necessary when any appliance is used by or near children.
- 6. To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, and the like.
- 7. Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.
- 8. Do not use an appliance for other than intended use. The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.
- 9. Do not install or store the appliance where it will be exposed to the weather or to temperatures below freezing.
- 10. Make sure an appliance mounted on a tank is securely installed before operating it.
- 11. Read and observe all the important notices on the appliance.
- 12. If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.

SAVE THESE INSTRUCTIONS

Questions or Missing Parts?

Call Customer Service at 1-800-526-0650 Monday through Friday 8:00 AM to 5:00 PM ET




ColorFusion[™] **LED**

With Remote Control




PART DIAGRAM & IDENTIFICATION

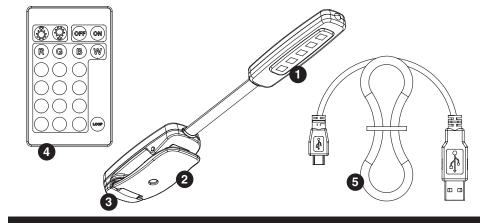


KEY	ITEM DESCRIPTION
1	5-LED Light Bar
2	Universal Clip: max gap of ¾"
3	Micro USB Port
4	Remote (takes battery type CR2025)
5	Micro USB Cable


REMOTE

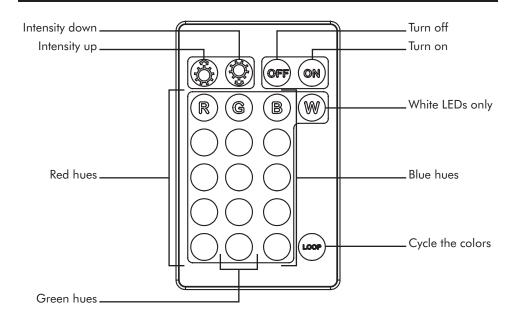



QUICK INSTALLATION

- 1. Place on aquarium or bowl (Fig. 1)
- 2. Attach the micro USB type "C" cable to the light (Fig. 2)
- 3. Plug cable into a USB adapter (not included) (Fig. 3)
- 4. Make a drip loop in the cord for safety and then plug in (Fig. 4)
- 5. Use remote to select color option (Fig. 5)
- 6. Always unplug before installing, repositioning, cleaning or removing

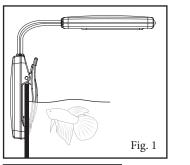

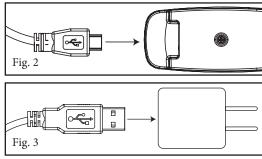


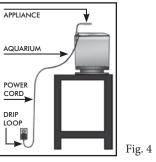


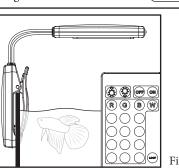

CHANGING THE REMOTE BATTERY

Push the lock button in toward the right while pulling the battery compartment out

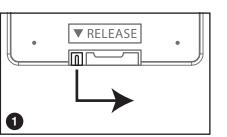

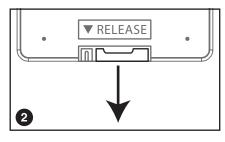

CORRECT DISPOSAL OF THIS PRODUCT

- E-Waste (household electrical waste)
- If the product still functions, consider donating it so it can be reused
- Refer to your state's Electronics Recycling guidelines for proper disposal